Power Distribution

– Driver's Under-dash Fuse/Relay Box – Fuse 6 (L4)

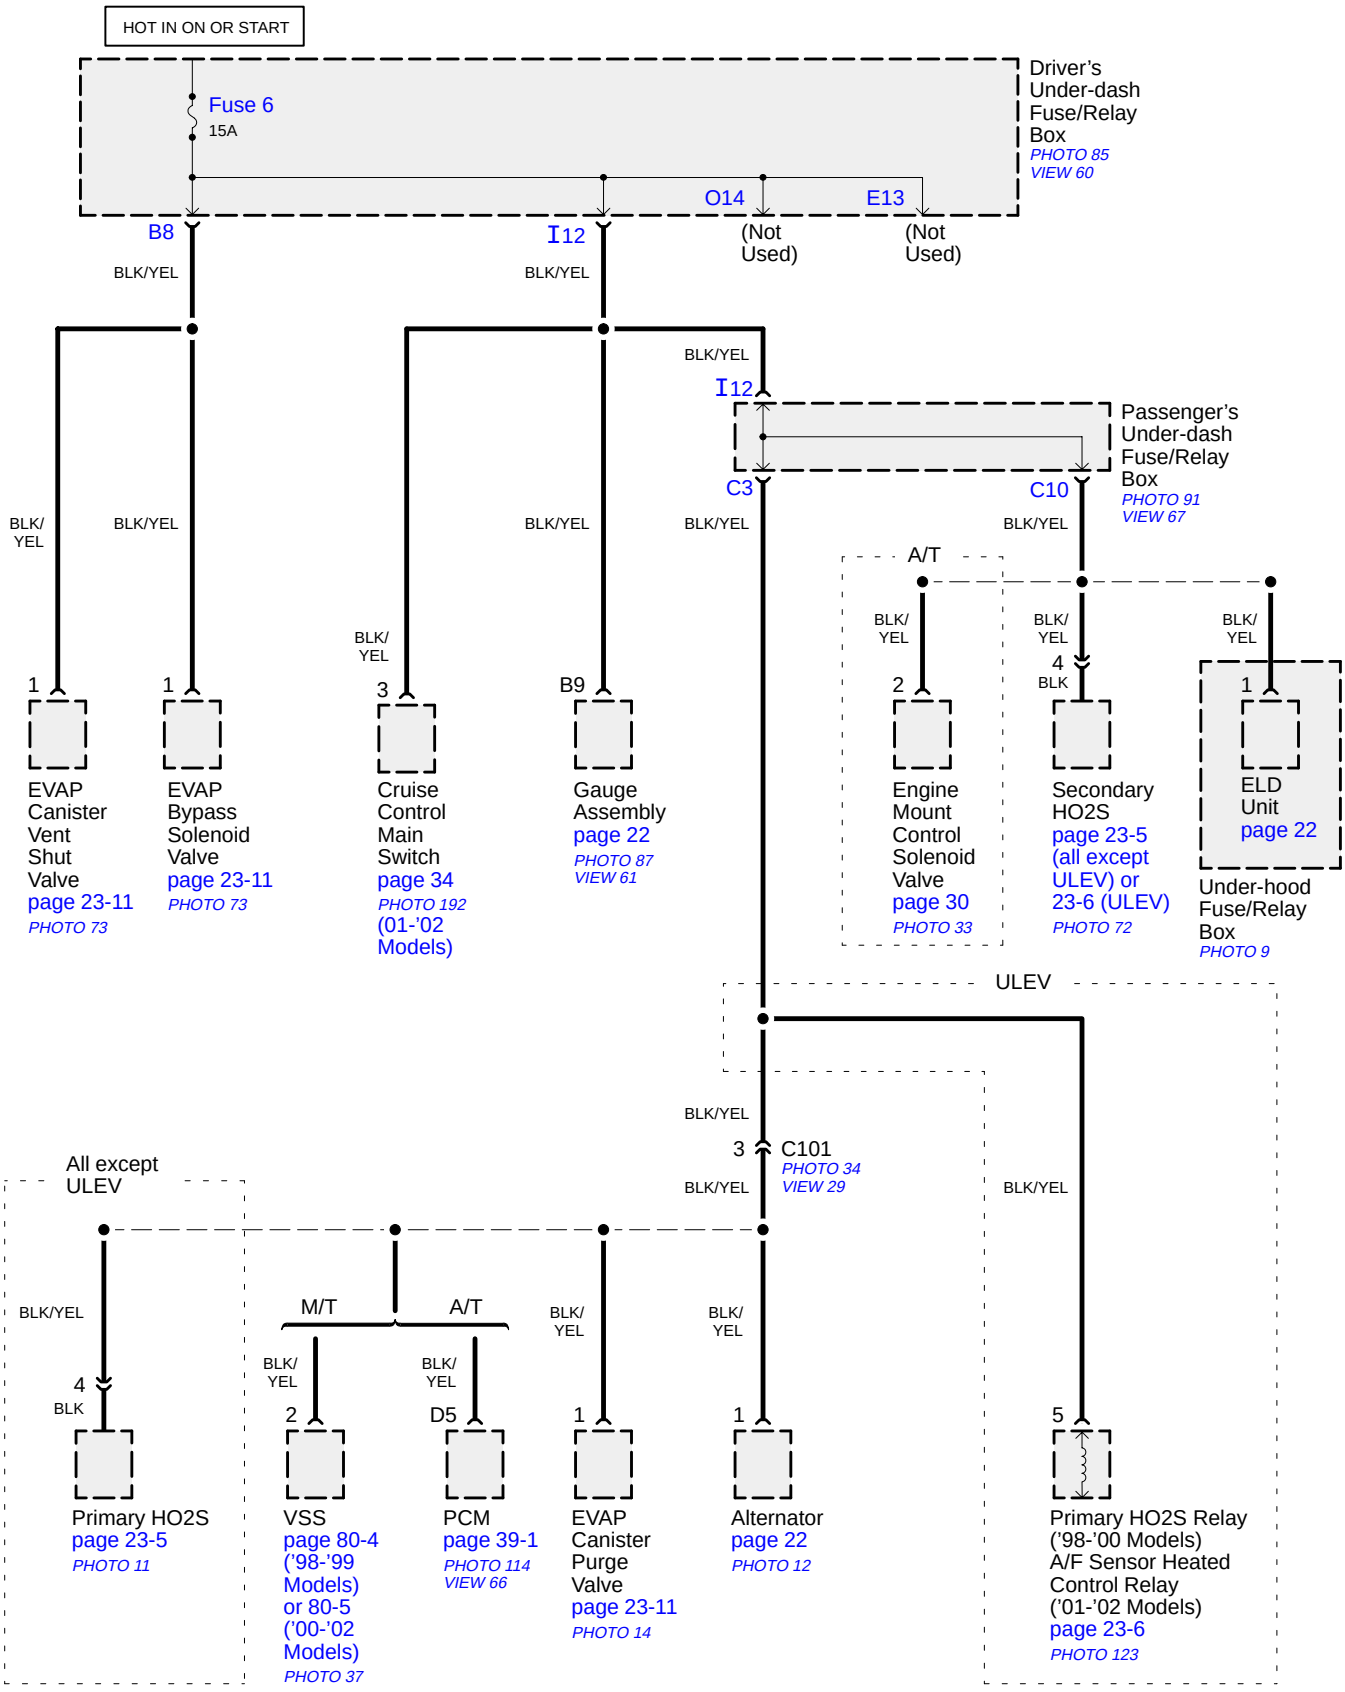

©2002 American Honda Motor Co., Inc.